




Assembly Instructions

End Cover Panel Installation

1


1. Drill (12) 3/16" holes in side panel of cabinet.
2. Locate holes 3-4" from edges of cabinet and space evenly—four rows of three holes as shown.
3. Do not drill any holes within 2" of cabinet shelves to allow for tool clearance.

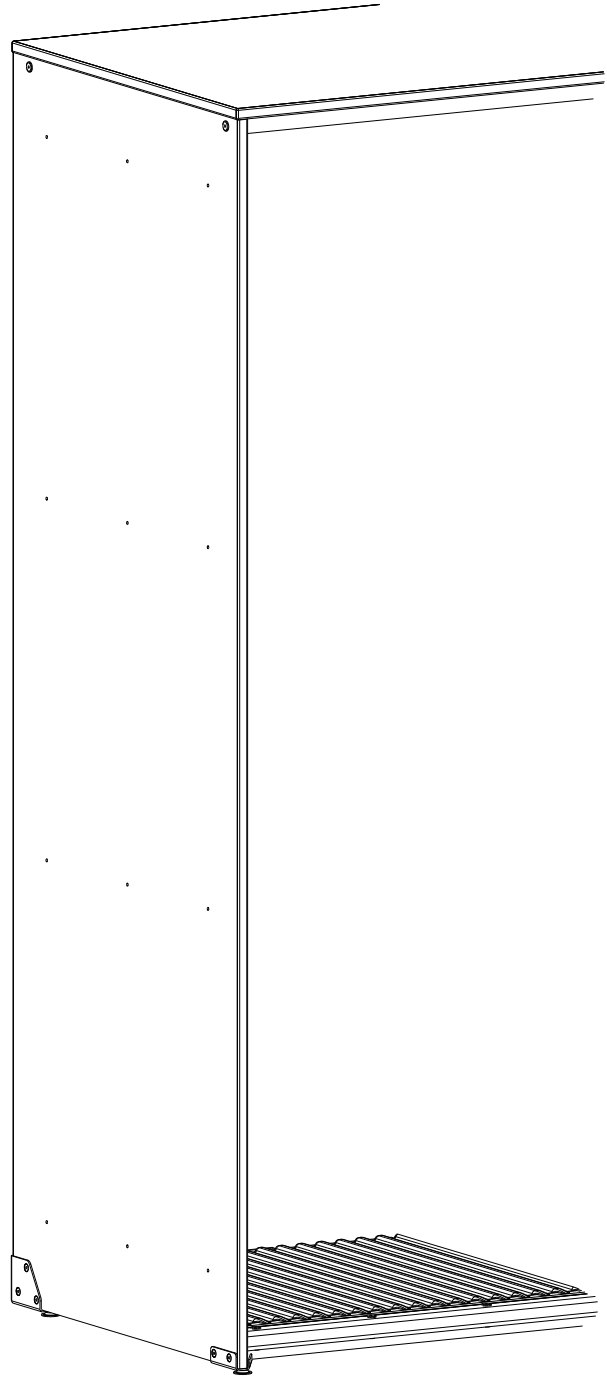



2

1. Move cover panel into position on side of cabinet.
2. Align front edge of cover panel with front edge of cabinet side and bottom edge of cover panel and bottom edge of cabinet side.
3. Clamp cover panel to side panel of cabinet when aligned properly.

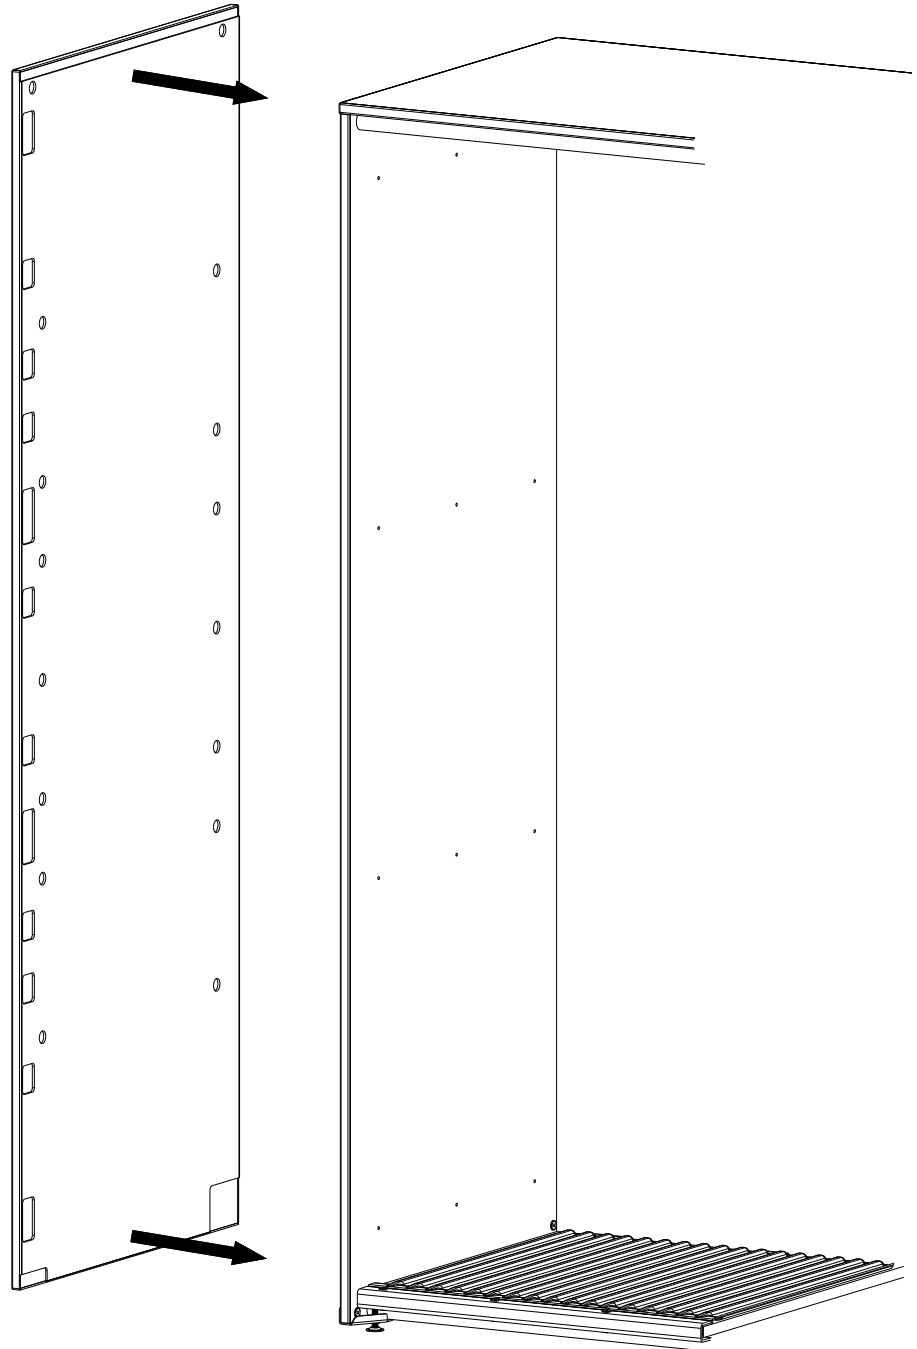



Assembly Instructions

End Cover Panel Installation

3

1. Attach cover panel to cabinet side with (12) 1-1/4" long screws.

